


■ Function
1 Structure

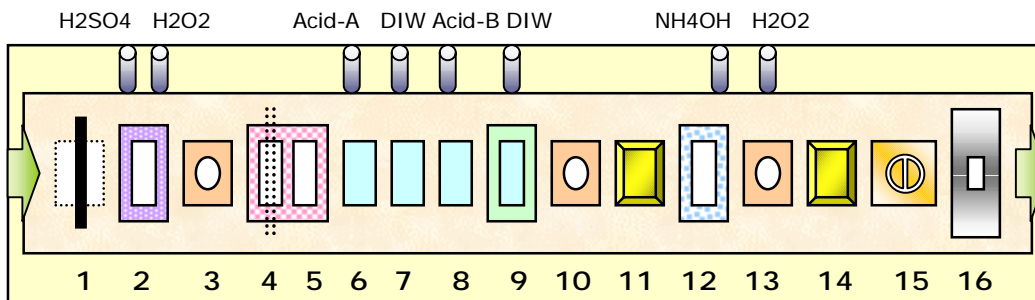

Recipe pattern

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Mode	loader	sulfuric acid / hydrogen peroxide	quick dump rinse	brush scrub ↕ waiting rinse		acid A type (#1)	acid A type (#2)	acid A type (#3)	acid B type	quick dump rinse	ultra sonic rinse	ammonia / hydrogen peroxide	quick dump rinse	mega sonic rinse	Spin-dryer With auto balance	un-loader
A																
B																
C																
D																
E																
F																
G																
H																
I																

Brush Scrub (No.5): A washing form by the process technology

Acid A type (No.6,7,8): concentration of 3 types

2 System integration (Option)

- Loading / unloading to AGV(External or built-in)
- Loading to unloading Cassette to cassette / Cassette to port
- FOUP cassette etc.

3 CIM: Computer integrated manufacturing (Option)

- Production quantity Temperature
- Medicine liquid supply Trouble & Abnormal mode
- Medicine liquid flow Medicine liquid concentration
- Control of real time by the upper computer



<http://www.shinsho.co.jp>

Exclusive Sales Distributor

- Tokyo Head office / Electronics Division : 2-5,Nihonbashi 1-chome,Chuo-ku,Tokyo 103-8261
Tel: +81-3-3276-2074,Fax: +81-3-3276-3679, E-mail: Masato.Fukabori@shinsho.co.jp
- Shinko Shoji Singapore Pte.Ltd. : CPF Building,79 Robinson Road,#21-07 Singapore 068897
Tel: +65-220-3329 ,Fax: +65-224-4700

SSC System Seiko Co., Ltd. <http://www.systemseiko.co.jp>

- Head Office : 2-951-6,Nanyo,Nagaoka-shi,Niigata 940-1164 Tel: +81-258-22-1322, Fax: +81-258-22-0185
- Semiconductor Cleaner Equipment Div. : 1489-25,Shinbori 2-chome,Higashiyamato-shi,Tokyo 207-0012
Tel: +81-42-590-0565, Fax: +81-42-590-0576, E-mail: ishiguri@systemseiko.co.jp